



CHANNEL 1

CHANNEL 2

CHANNEL 3

CHANNEL 4

LEFT

RIGHT

INPUTS

OUTPUTS

LEFT TRIM

RIGHT TRIM

Phantom	1
Low Cut	
Phantom	2
Low Cut	
Phantom	3
Low Cut	
Phantom	4
Low Cut	

Phan Pwr ON=dwn
Low Cut ON=up

ProMix IV

Four Channel Stereo
Microphone Mixer


MX124

BATTERIES
9V x 2

ROLLS

MADE IN USA
www.rolls.com

15 VDC

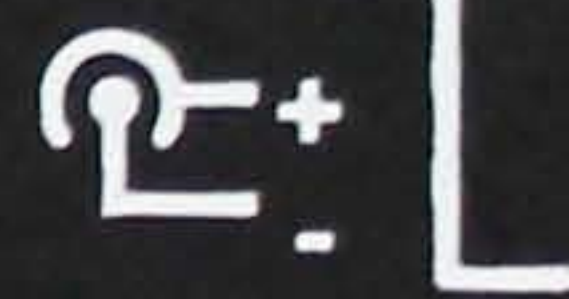

POWER
OFF - ON



ROLLS
MADE IN USA
www.rolls.com

clip



pwr



PHONES
AUX

LEVEL
PAN

LEVEL
PAN

LEVEL
PAN

LEVEL
PAN

R L

R L

R L

R L

CHANNEL 1

CHANNEL 2

CHANNEL 3

CHANNEL 4

ProMix IV

Four Channel Stereo
Microphone Mixer

MX124